

FEATURES AND SPECIFICATIONS

LEDs: 7, 15W each (RGBWA+UV, 6in1)
 White LED Color Temperature: 6500K
 Beam angle: 25 ° (15° Optional)
 Control system: DMX512 + Stand Alone Modes
 DMX channels: 6/10
 DMX connector: 3 pin XLR I/O
 Refresh Rate: >3000 Hz)
 Voltage: 120 - 240 VAC 50/60Hz
 Max power consumption: 105 Watts + Auto Switching
 Power Supply
 Cooling: Internal Fan
 Body material: Die Cast Aluminum
 Body color: Black
 Size: 9.25"L x 4.65"W x 11.42"H (With Yoke)
 Weight: 8.82 lbs. (4.0 kg)

DESCRIPTION

The FXLD157FRP6I is a RGBWA+UV LED lighting fixture. It is suitable for stage, disco, night club, and other artistic applications. It has several stand-alone control modes and can operate via a DMX512 external signal.

A double yoke enables the fixture to be operated in several positions.


INSTALLATION

LOCATION

The FXLD157FRP6I is rated IP20 and is intended for INDOOR USE ONLY.

Locate the unit in a well ventilated area away from moisture and heat. Keep the vent holes clear. Holes are provided on the yokes to install a lighting bar pipe clamp. Use a safety cable when hanging the fixture.

POWER CONNECTIONS



The FXLD157FRP6I has a blue turn and lock connector for power input. A compatible power cable is provided for connection to a 120 VAC, 15 Amp, 60Hz, grounded service. Push the blue connector on the cable straight into the blue connector on the unit and twist approx. 1/8 turn clockwise to latch it.



The white turn and lock connector on the unit is used to pass power on to another FXLD157FRP6I unit. A mating white connector is also provided.

Caution is advised since the line cord is rated for approx. 7 Amps maximum.

THE SAFETY GROUND TERMINAL ON THE POWER CABLE MUST BE USED.

DMX CONNECTIONS

A system using DMX control should be connected as a chain of devices. In other words the control signal cable should proceed from the controller to the first receiving device and then to others in a continuous "daisy chain" fashion.

The fixture has a DMX IN and a DMX OUT connector to be used to connect the chain. The control cable should NOT be split into a multiple run star arrangement with a cable running from the controller directly to each receiving device pack.

DMX CONNECTOR PIN ASSIGNMENTS

There are two different connectors generally used for DMX control. They are both XLR type connectors. Some units use 3 pin connectors. Others use 5 pin. The FXLD157FRP6I only has 3 pin connections. DMX is received on the 3 pin MALE connector on the back of the unit. The 3 pin FEMALE connector is used to connect to the next DMX device on the control chain.

The table below shows the pin assignments for the 3 pin DMX cable.

PIN #	SIGNAL NAME
1	DMX COMMON
2	DMX DATA -
3	DMX DATA +


DMX TERMINATION

A DMX chain should be terminated at the last receiving device on the chain. This is done by installing a commonly available 1/4 Watt, 120 Ohm resistor across the DATA - and DATA + wires at the last device. If you have only a few fixtures very close together and a very short run to the controller then you may be able to operate without the terminator.

OPERATION

A control panel on the back of the unit is used to set the operating options. It consists of an LED display and four buttons (MENU, UP, DOWN, and ENTER)

CONTROL PANEL

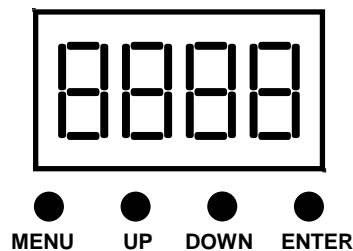

Push MENU to access the operating options. When you reach the option you want to set or change press ENTER and use UP or DOWN to set a value. Push ENTER again to save your changes and activate the option. See the "MENU NAVIGATION" diagram for additional details.

There are 7 operation modes: DMX 6 channel, DMX 10 channel, Color Fade, Color Change, Color Select, Manual Level (6 selections), and Demo.

DMX OPERATION

For DMX operation the FXLD157FRP6I fixture can be configured as a 6 channel, or 10 channel unit.

Use the **dX.XX** (6 ch) or **Ax.xx** (10 ch) menu to set the starting address of the unit. You can select the starting address of the unit with the UP and DOWN buttons.

Detailed information on DMX channel operation is given in the tables DMX VALUES AND FUNCTIONS.

MANUAL OPERATION (CSXX)

For additional manual operations you can use the Color Select menu (**CSXX**) to select a color and level.

COLOR FADE (CFXX)

The Color Fade mode cycles smoothly through a sequence of colors. Use the **CFXX** menu to set the speed and activate the option. The range is from 1 to 99. 99 is fastest.

R, G, B, W, A + UV MANUAL LEVEL CONTROL

You can operate the individual color levels manually using the **r000**, **g000**, **b000**, **E000**, **U000** and **Y000** menus. Use the UP and DOWN buttons to change the level, Push ENTER when done. The range is 000 - 255 (255 is maximum).

DEMO MODE (dENo)

The unit cycles through a fixed series of color and fades. There are no other adjustments or settings in this mode.

SOUND MODE (SOUN)

The unit reacts to sounds by changing colors randomly. There are no other settings within this mode.

Delay Mode (dEL0)

The delay mode slows down the commands that are given to the light with or without DMX present. Use the **dEL0** to set the delay speed and activate the option. The range is from 0 to 3. 0 is off and 3 is the longest delay.

COLOR SELECT (CSXX)

Color Select provides a multiple of preprogrammed color macros at various intensities.

Access the color Selector by pressing the MENU button

until **CSXX** appears on the display. Use the **UP** and **DOWN** buttons to select the desired color and intensity then press **ENTER** to save your selection. The range is from 00 to 99.

Color Change (CCXX)

The Color Change mode switches continuously through a sequence of colors. Use the **CCXX** menu to set the sequence speed. The range is from 00 to 99. 99 is fastest.

MAINTENANCE AND REPAIR



CAUTION DO NOT OPEN UNIT
RISK OF ELECTRIC SHOCK
RISK OF FIRE

TROUBLESHOOTING

Check that you have power applied to the unit.

Check the DMX control cable.

Check the address settings of the unit and the controller.

CLEANING


Do not use harsh chemicals or solvents when cleaning the fixture. A mild detergent can be used sparingly if needed. Ensure that the unit is completely dry before re-use.

REPAIR

The FXLD157FRP6I does not contain any user serviceable parts. Internal service on the unit by other than Lightronics authorized agents will void the warranty.

If service is required, contact the dealer from whom you purchased the item, or contact the Lightronics, Service Department, 509 Central Drive, Virginia Beach, VA 23454. Tel: 757 486 3588.

MENU NAVIGATION

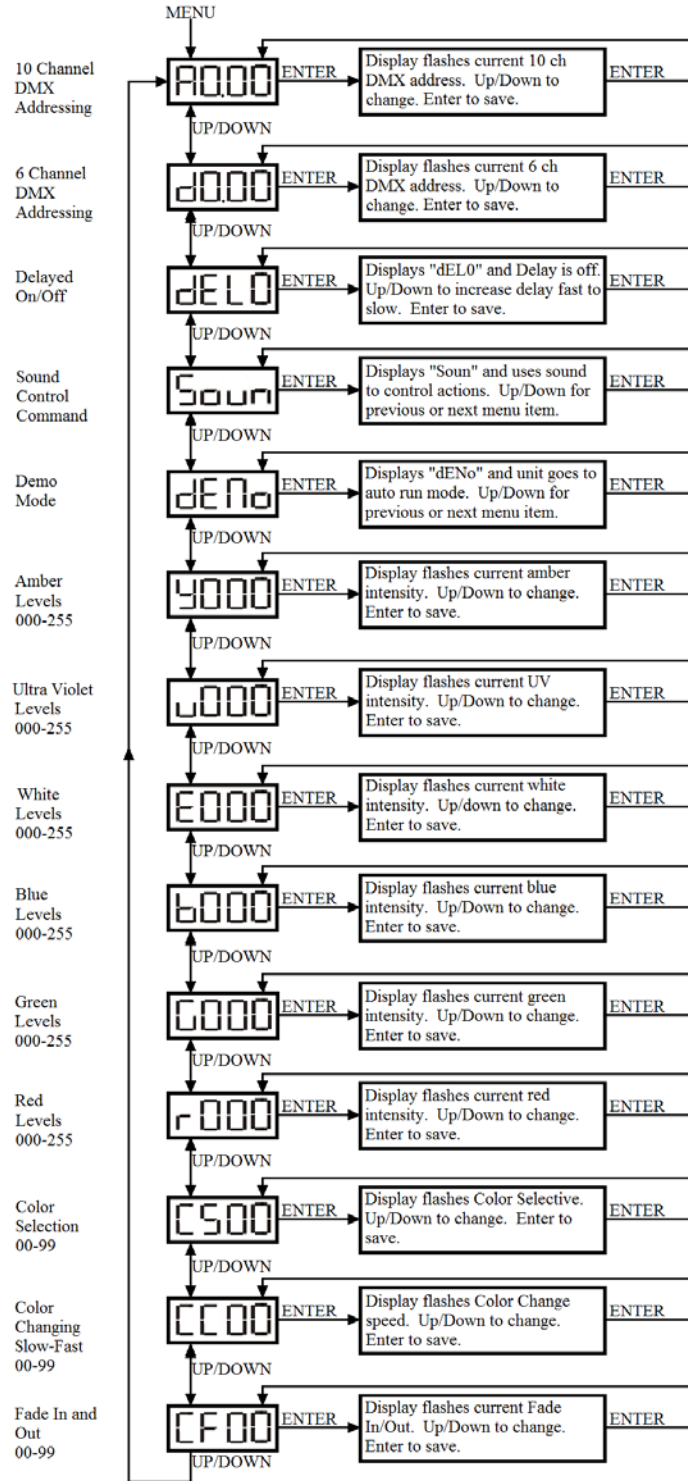

DMX VALUES AND FUNCTIONS

6 CHANNEL MODE (MODE dX.XX)

CHANNEL NO.	FUNCTION
1	0 - 255 Red Level
2	0 - 255 Green Level
3	0 - 255 Blue Level
4	0 - 255 White Level
5	0 - 255 UV Level
6	0 - 255 Amber Level

10 CHANNEL MODE (MODE AX.XX)

CHANNEL NO.	FUNCTION
1	Master Dimmer
2	Strobe Control
3	0 - 255 Red Level
4	0 - 255 Green Level
5	0 - 255 Blue Level
6	0 - 255 White Level
7	0 - 255 UV Level
8	0 - 255 Amber Level
	33 - 65 Red/Green
	66 - 96 Red/Green
	97 - 129 Green/Blue
	130 - 160 Green/Blue
	161 - 191 Red/Blue
	192 - 224 Red/Blue
	225 - 254 R/G/B/A/W
	255 All on
9	0 - 9 No Function
	10 - 63 R + B Auto
	64 - 127 R + G Auto
	128 - 191 G + B Auto
	192 - 255 R+G+B+w+UV+A Auto
10	0 - 9 No Function
	10 - 63 R + B Fade
	64 - 127 R + G Fade
	128 - 191 G + B Fade
	192 - 239 R+G+B+W+A+UV Fade
	240 - 255 Sound Triggered Fade

A graphic banner for the warranty. It features two dark grey banners pointing towards each other, each with the 'LIGHTRONICS' logo in white. In the center, a dark grey rectangular box contains the word 'WARRANTY' in large, bold, white capital letters.

LIGHTRONICS

WARRANTY

LIGHTRONICS

This product is warranted for a period of TWO YEARS from the date of purchase against defects in materials and workmanship.

This warranty is subject to the following restrictions and conditions:

- A) If service is required, you may be asked to provide proof of purchase from an authorized Lightronics dealer.
- B) This warranty is valid only for the original purchaser of the unit.
- C) This warranty does not apply to damage resulting from abuse, misuse, accidents, shipping, and repairs or modifications by anyone other than an authorized Lightronics service representative.
- D) This warranty is void if the serial number is removed, altered or defaced.
- E) This warranty does not cover loss or damage, direct or indirect arising from the use or inability to use this product.
- F) Lightronics reserves the right to make any changes, modifications, or updates as deemed appropriate by Lightronics to products returned for service. Such changes may be made without prior notification to the user and without incurring any responsibility or liability for modifications or changes to equipment previously supplied. Lightronics is not responsible for supplying new equipment in accordance with any earlier specifications.
- G) This warranty is the only warranty either expressed, implied, or statutory, upon which the equipment is purchased. No representatives, dealers or any of their agents are authorized to make any warranties, guarantees, or representations other than expressly stated herein.
- H) This warranty does not cover the cost of shipping products to or from Lightronics for service.
- I) Lightronics Inc. reserves the right to make changes as deemed necessary to this warranty without prior notification.